

---

# Time Warner Cable Remote Control User Guide

---

*Time Warner Cable  
Remote Control User  
Guide*

*Downloaded from  
[template-dev.mobaptist.org](http://template-dev.mobaptist.org)  
by Yaretzi & Emerson*

---

## TIME WARNER CABLE REMOTE CONTROL USER GUIDE: MASTER YOUR VIEWING EXPERIENCE

---

Your remote control is the command center for your home entertainment, and when you have a Time Warner Cable system, mastering its remote can transform how you watch TV. Whether you are setting up a new device, trying

to access advanced features, or simply wanting to replace lost functionality, this **Time Warner Cable Remote Control User Guide** will walk you through everything you need to know. From basic programming to troubleshooting, we cover the most common models—including the UR5 and other universal remotes—so you can get back to enjoying your favorite shows with minimal hassle.

Time Warner Cable remotes are

designed to control not only your cable box but also your TV, soundbar, and other audio/video equipment. With a few simple steps, you can consolidate multiple remotes into one. This guide uses clear, actionable instructions that work for the majority of Time Warner Cable universal remotes. Let's dive in and unlock the full potential of your remote.

---

## UNDERSTANDING YOUR TIME WARNER CABLE REMOTE CONTROL

---

Before programming, it helps to identify which remote model you have. The most common are the **UR5** series and the **DTA** (Digital Transport Adapter) remotes. The UR5 typically has a glossy black finish, a "CBL" button at the top,

and a code search feature. The DTA remote is simpler, often without a dedicated input or volume control (relying on the TV's built-in controls).

Key components you will find on most Time Warner Cable remotes:

- **Power button** – turns the cable box or TV on/off
- **Input/Select** – switches between connected devices
- **Channel rocker** – navigates channels up and down
- **Volume rocker** – controls the TV or audio system volume
- **Mute** – silences the audio temporarily
- **Guide** – opens the on-screen TV schedule
- **Menu, Exit, Info** – for interactive

navigation

- **Number pad** – direct channel entry
- **DVR controls** – play, pause, rewind, fast-forward, record

Many users are unaware that their Time Warner Cable remote can also control a second device like a soundbar or VCR. The guide below will show you how to pair your remote with these components using either automatic code search or manual code entry.

---

## PROGRAMMING YOUR TIME WARNER CABLE REMOTE CONTROL

---

Programming is the most common task for any **Time Warner Cable Remote Control User Guide**. You have two

primary methods: **Auto Code Search** (for when you don't know the code) and **Direct Code Entry** (using a manufacturer code from the manual). We recommend starting with auto search because it's quick and foolproof for most TVs.

# Method 1: Auto Code Search

1. Turn on the device you want to control (e.g., your TV).
2. Press and hold the **CBL** button on the remote until the light at the top turns on and stays lit. (If you don't see a CBL button, your remote may use a different setup;

see your specific model instructions.)

3. Press the **TV** button on the remote (this tells the remote you are programming for a TV). The light will blink and then stay on.
4. Alternate between pressing the **Power** button and pointing the remote at the TV. Wait 2 seconds between presses. The TV should turn off when the correct code is found.
5. Once the TV turns off, press the **Enter** or **Select** button (usually the middle OK button) to lock in the code. The light will turn off.
6. Test volume up/down and power. If the TV responds, programming is complete.

If the auto search fails after multiple cycles, try the direct code entry method below.

## Method 2: Direct Code Entry

1. Find the code for your TV brand in the remote's manual, or use the online code lookup tool on the Time Warner Cable (now Spectrum) website.
2. Turn on your TV.
3. Press and release the **CBL** button once. Then press and hold the **TV** button until the light blinks twice and stays on.
4. Enter the 4-digit code using the

number pad. The light should blink twice to confirm.

5. Press the **Power** button on the remote. If the TV turns off, the code worked. Press **Enter** to save.

Some common TV brands and their codes for Time Warner Cable remotes include: Samsung (0761, 1006), LG (1172, 1001), Sony (1000, 1081), Vizio (1178, 1085). Always test additional functions like volume and input after entering a code—if something doesn't work, try a different code.

## Programming a

## Second Device (Audio Receiver or Soundbar)

You can also use your remote to control an audio device. Follow the same auto search method, but press the **AUX** button (if available) instead of TV. If your remote lacks an AUX button, you may need to use the CD or DVD option. Consult your specific model's user guide for alternative device labels.

---

### USING ESSENTIAL REMOTE FUNCTIONS

---

Once your remote is programmed, it's

time to explore the features that make TV watching more enjoyable. The following functions are universal across Time Warner Cable remotes:

## Volume and Mute Control

By default, the volume buttons on your remote control the cable box's audio output. If you want to control the TV's volume instead (recommended for better sound quality), you can reprogram the remote to pass volume control to the TV. To do this: press **CBL**, then press and hold **Volume Up** until the light blinks twice. Now the volume rocker will control your TV. To revert, repeat the process.

## Using the Guide and Interactive Features

The **Guide** button opens a full schedule of current and upcoming shows. Use the arrow keys to scroll through time slots and channels. Press **Info** to see a description of a highlighted program. **Exit** closes the guide. With your remote, you can quickly set reminders, browse by category, or search for titles using the on-screen keyboard.

## DVR Playback Controls

If you have a Time Warner Cable DVR, the remote gives you full control over recorded content. The **Record** button (red dot) starts a recording on the current channel. **Play, Pause, Rewind, Fast Forward, Stop** work exactly as you would expect. Use **Skip** or **Replay** to jump forward 30 seconds or back 10 seconds. To access your list of recordings, press **DVR** or **List**—the exact button depends on your model.

## Switching Inputs and Component Control

To switch from cable to a gaming console or streaming device, press the **Input** or **TV/Video** button. This cycles through available HDMI and composite inputs on your TV. If your remote has a dedicated **AUX** or **DVD** button, you can program it to control that input directly.

---

### TROUBLESHOOTING COMMON REMOTE CONTROL ISSUES

---

Even the best remotes have occasional hiccups. Below are solutions to frequent

problems you might encounter with your Time Warner Cable remote.

## Remote Not Responding at All

- **Check batteries:** Weak or dead batteries are the most common culprit. Replace with fresh ones (usually two AA or AAA).
- **Reset the remote:** Remove the batteries, press every button two or three times to discharge residue, then reinsert batteries.
- **Obstruction:** Ensure there is a clear line of sight between the remote and the cable box/TV sensor. Clean the infrared window

on the remote with a dry cloth.

## Remote Controls TV but Not the Cable Box

This usually means the remote is in TV mode instead of CBL mode. Press the **CBL** button once (the light should blink) to switch back to controlling the cable box. If the light does not come on, reprogram the remote following the auto code search method, but targeting the cable box (step 2: press CBL, then press and hold CBL again until the light stays on).



## Volume and Mute Don't Work After Programming

As mentioned earlier, the remote might need to be set to pass volume commands to the TV. Try the volume pass-through procedure described in the previous section. If that fails, you may have programmed the wrong device type. Repeat the programming for TV, making sure you press **TV** during the setup.

## Code Search Never Finds a Working Code

If the auto search cycles through dozens of codes without turning off your TV, try a manual code entry. Look up codes online for your TV brand and model year. Some newer TVs require updated code lists—check the Spectrum remote support page. Alternatively, you can try a factory reset: press **CBL** then **OK** simultaneously until the light blinks twice, then try programming again.

---

## PERFORMANCE OF YOUR REMOTE

A little maintenance goes a long way. Follow these tips to keep your **Time Warner Cable Remote Control** working optimally:

- **Use high-quality batteries:** Alkaline or lithium batteries last longer and reduce the risk of leakage.
- **Keep it clean:** Wipe the remote with a slightly damp cloth (no solvents) and avoid spills.
- **Avoid extreme temperatures:** Don't leave the remote in direct sunlight or near heating vents.
- **Store properly:** Use a remote holder or a designated spot to prevent loss and damage from

drops **TIPS TO EXTEND THE LIFE AND**

- **Update your remote's code database:** If you own a universal remote capable of software updates (rare for older models), check with Spectrum for the latest IR codes.

## FINDING REPLACEMENT OR ADDITIONAL REMOTES

If your remote is lost, damaged, or you simply want a spare, you have several options. **Spectrum (formerly Time Warner Cable)** offers replacement remotes at their local offices or through their website. The cost is usually nominal for a standard UR5 or DTA remote. Third-party universal remotes can also work, but they require